

SUPPORTED COMMAND SET

Sr. no.	COMMANDS	DESCRIPTION	HEX VALUE
1.	HT	Horizontal tab	<09h>
2.	LF	Line feed	<0Ah>
3.	CR	Print and carriage return	<0Dh>
4.	ESC SP	Set right character spacing	<1Bh><20h><n>
5.	ESC 2	Set default line spacing	<1Bh><32h><n>
6.	ESC 3	Set line Spacing	<1Bh><33h><n>
7.	ESC @	Initialize printer	<1Bh><40h>
8.	GS!	Select character size	<1D><21h><n>
9.	GS B	Turn Black/white mode on/off	<1D><42h>
10.	GS L	Set left margin	<1Dh><4Ch><n>
11.	ESC D	Select horizontal tab position	<1Bh><24h><n1> <n2>
12.	ESC G	Turn Double strike mode on/off	<1Bh><47h><01h> /<00h>
13.	ESC v	Transmit paper sensor status	<1Bh><76h>
14.	GS ENQ	Transmit Real time printer status	<1Dh><05h>
15.	ESC d	Print and feed line	<1Bh><64h>
16.	ESC j	Print and feed paper	<1Bh><4Ah><n>
17.	ESC \$	Set absolute print position	<1Bh><24h><n1> <n2>
18.	ESC \	Set relative print position	<1Bh><2Fh>
19.	ESC !	Select print mode	<1Bh><21h><n>
20.	GS W	Set printing area width	<1D><77h><n>
21.	ESC #	Print logo	<1Bh><23h><1Ah> <28h><hex string>
22.	GS (A	Print test slip	<1Dh><28h><41h>